

How to Use the Pneumatic Locking System

1. Locate the Ports

Under the toe kick of the display, you'll find two labeled ports:

- LOCK – to secure the vitrine
- UNLOCK – to release the lock

2. Prepare the Compressed Air

Use the included extension tube attached to your can of compressed air. If needed, replacement air duster cans ("air in a can") may be purchased at any office supply store.

3. Insert the Extension Tube

Insert the extension tube into the desired port (LOCK or UNLOCK).


4. Pinch for a Tight Seal

Lightly pinch the clear tubing surrounding the port to ensure a snug seal between the tubing and the extension tube.

5. Apply Air

Release the compressed air into the port:

- For locking, insert air into the LOCK port. You'll hear a distinct click indicating the vitrine is now secured.
- For unlocking, insert air into the UNLOCK port. Another click confirms the lock has been released.

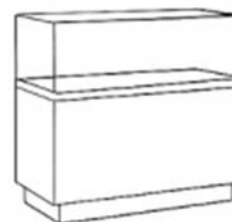





LOCK

PNEUMATIC LOCK

