


Cash Wrap with Front Showcase - (Item #DLTRC)



LEDGETOP COUNTER WITH SHOWCASE ASSEMBLY INSTRUCTIONS

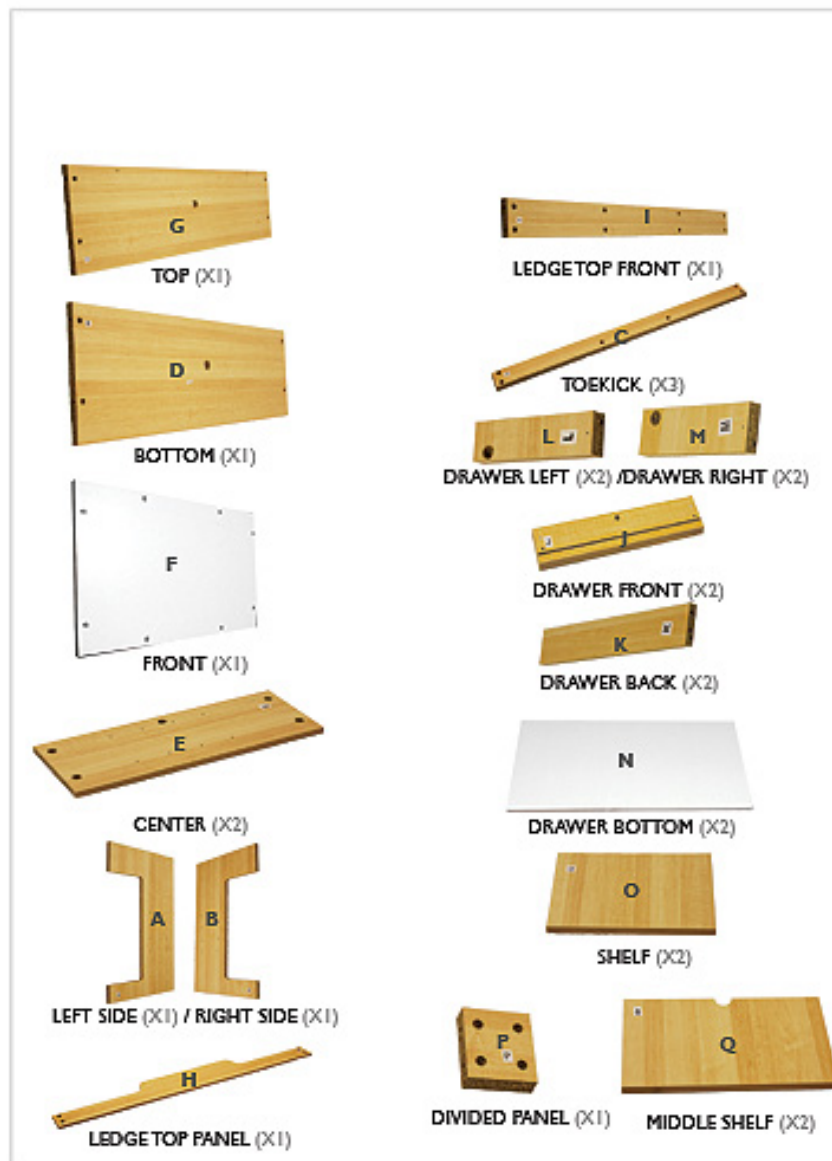

TOOLS NEEDED



NOTE: It is recommended that two persons assemble this unit.

PARTS LIST - I



AGCOIN2
(X4)




AGCOIN3
(X4)



DRAWER LOCK (X2)



HW117-72 (X1)



side



#6x12 PHILLIP
SCREW (X34)




TRON SCREW x 3/4" (X3)



SCLKP (X1)



HW116-71 (X1)



shelf



#6 x 5/8" PAN SCREW
(X25)



#6x11/8 PHILLIP SCREW
(x4)



BT8C
(x6)



HW118-71 (X1)



door



NED9024-26 (X2)

GLASS DOOR (x2)



GLASS GLAZING (X2)



DOWEL PIN
(X12)



TOP GUIDE
(X6)



GLIDE
(X9)



SS27CD
(x3)



DOOR PROTECTION (x2)



SHELF SUPPORT
PIN (X16)



PLASTIC GLAZING
(X8)



BOLT
(X64)



#10 CAM LOCK
(x64)



COUNTER
SLIDERS
(2 PAIR)



DRAWER
SLIDERS
(2 PAIR)



SCREW-CAP
(x38)



SCREW-CAP(W)
(x8)



DOOR PULL (X2)



CAP (X2)

TOOLS NEEDED



1.

BASE AND SIDE ASSEMBLE

BOTTOM PANEL (x1)

TOE KICK PANEL (x3)

RIGHT SIDE PANEL (x1)


#10 CAM LOCK (x22)

BOLT (x28)

COUNTER SLIDER (x1)

#6x12 PHILLIPS SCREWS (x2)

1. Connect toe kick panel to bottom panel using bolts.
2. Insert and tighten #10 cam locks.
3. Attach slider to the left panel with #6x12 phillips screws.
4. Connect base with right side panel using bolts.
5. Insert and tighten #10 cam locks.
6. Insert the bolts on bottom panel.

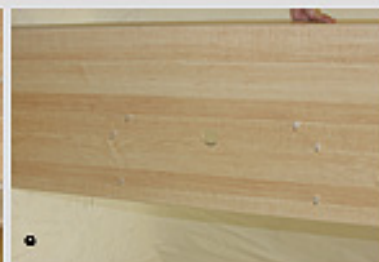

2.

CENTER PANEL & FRONT PANEL ASSEMBLE

CENTER PANEL (x2)

FRONT PANEL (x1)

#10 CAM LOCK (x18)

BOLT (x2)

COUNTER SLIDER (x2)

#6x12 PHILLIPS SCREWS (x4)

1. Attach slider to center panels; tighten.
2. Connect the front and bottom panels; tighten.
3. Attach center panels to bottom base; tighten.



3.

LEDGETOP ASSEMBLE

LEDGETOP PANEL (x1)

LEDGETOP FRONT PANEL (x1)

DIVIDED PANEL (x1)

#10 CAM LOCK (x16)

BOLT (x4)

1. Connect ledge top front panel and ledge top panel ; tighten.

2. Insert #10 cam lock in divided panel.

3. Connect divided panel to ledge top panel ; tighten.



4.

TOP PANEL ASSEMBLE

TOP PANEL (x1)

#10 CAM LOCK (x4)

BOLT (x10)

1. Attach top panel using bolts.

2. Tighten #10 cam locks.

3. Connect Ledge top with top panel; tighten.






5.

LEFT SIDE PANEL ASSEMBLE

LEFT SIDE PANEL (x1)
BOLT (x16)
COUNTER SLIDER (x1)
#6x12 PHILLIPS SCREWS (x2)

GLIDE (x9)
SCREW CAP (x34)
WHITE SCREW CAP (x8)

1. Attach slider to the left panel with #6x12 phillips screws.
2. Attach left side panel using bolts.
3. Tighten #10 cam locks.
4. Secure all the #10 cam locks & install cover caps.
5. Attach glides on the toe kick.

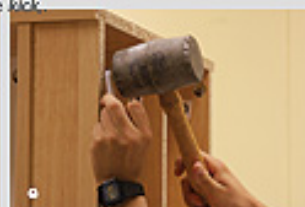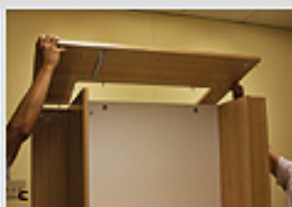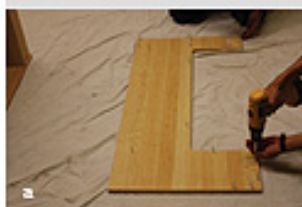

1. Insert dowel pins into place.
2. Connect drawer left, drawer right, and drawer back pieces.
3. Slide in drawer bottom.
4. Attach drawer front to drawer using bolts; tighten #10 cam locks.
5. Screw the drawer side & back using #6x18 phillips screws.
6. Install the drawer lock using #6x12 phillips screws.
7. Attach drawer sliders to drawer using #6x12 phillips screws.
8. Install #10 screw caps.

6.

DRAWER ASSEMBLE

DRAWER FRONT (x2)
DRAWER RIGHT (x2)
DRAWER LEFT (x2)
DRAWER BOTTOM (x2)
DRAWER BACK (x2)

DRAWER SLIDERS (2 PAIR)
#10 CAM LOCKS (x4)
BOLT (x4)
DOWEL PINS (x12)
#10 SCREW CAPS (x4)

DRAWER LOCK & KEY (x2)
#6x12 PHILLIPS SCREWS (x24)
#6x18 PHILLIPS SCREWS (x4)



7.

INSTALL DRAWER & SHELVES

SHELF SUPPORT PINS (x16)

SHELF PANEL (x2)



CENTER SHELF PANEL (x2)

CAP (x1)

1. Insert shelf support pins in place.

2. Slide drawer and shelf into place.

3. Insert cap into hole.

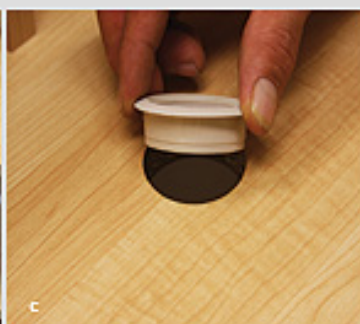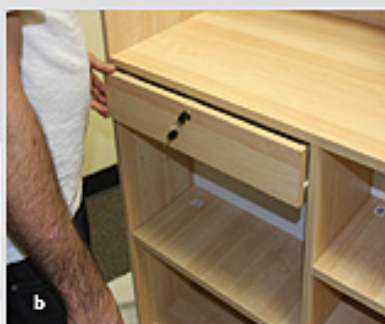

8.

STANDARD & DOOR FRAME ASSEMBLE

#6 x 58 PAN SCREW (x11)

HW117-71 (x1)

SS27CD (x3)

1. Attach HW117-71 on top; tighten by using 2 #6X58 pan screw.

2. Tighten SS27CD on front panel with 1 #6X58 pan screw.

2. Tighten the same SS27CD part on base with 2 #6X58 pan screw.

3. Repeat steps 1 & 2 to assemble the other 2 pcs of SS27CD.



9.

SIDE GLASS ASSEMBLY

SIDE GLASS (x2)

AGCON 2 (x4)



AGCON 3 (x4)

#6X58 PAN SCREW (x12)

PLASTIC GLAZING (x8)

TROX SCREW 3/4" (x8)

1. Connect right side glass with bottom and front panel using AGCON 2 & AGCON 3 using 8 TROX SCREW 3/4" & #6X58" PAN SCREW.
2. Repeat step 1 to connect left.
3. Put plastic glazing on TROX SCREW 3/4".

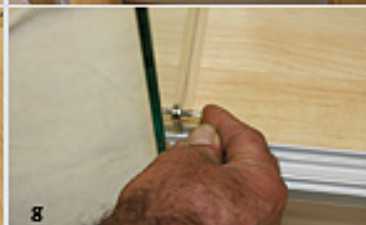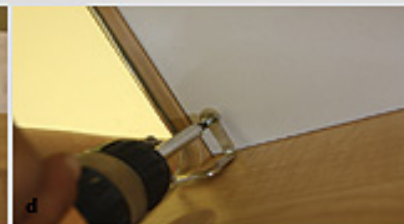

DOOR FRAME ASSEMBLY



10.

#6 x 58 PAN SCREW (x2)

HW116-71 (x1)

HW18-71 (x1)

1. Attach HW116-71 to bottom panel using #6x58 pan screws.
5. Snap HW18-71 into HW116-71.

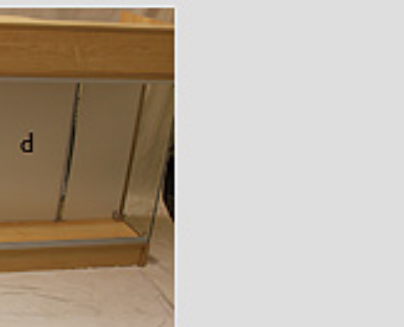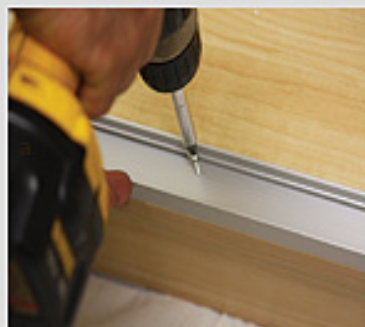


e

11.

BRACKET AND GLASS SHELF ASSEMBLE

BT12C (x6)
GLASS SHELF (x2)

1. Attach BT08C to SS27CD with proper height.
2. Place glass shelf sit on brackets.

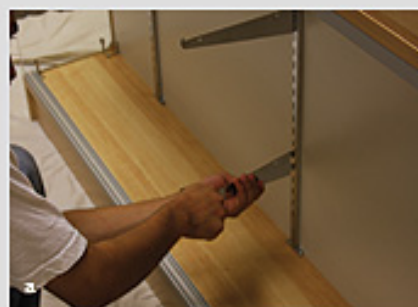

12.

GLASS DOOR ASSEMBLE

GLASS DOOR (x2)
GLAZING CHANNEL (x6)
NEO9034-4 (x2)
TOP GUIDE (x4)

#6X12 PHILIPS SCREW (x2)
DOOR PULL (x2)
LOCK (x1)
DOOR PROTECTION (x2)

1. Put 3 pcs of glazing channel on glass door.
2. Install NEO9034-48, door protection with glass door.
3. Install lock with NEO9034-36 by #6x12 philips screw.
4. Put 2 pcs of top guide on the top of glass door.
5. Insert glass door into case.
6. Attach the DOOR PULL on glass door.
7. Repeat 1-6 to install other glass door.

