

Assembly Guide

Laminate Pedestal Base (B1616 & B1414)

Tools required.


Phillips head screwdriver.



Flat head screwdriver.



Hammer.

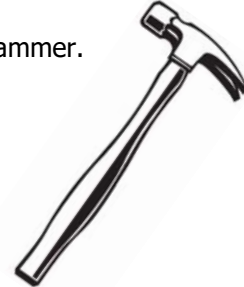


Parts:

Cam-Lock Nuts X 12







Cam-Lock Screws X 12

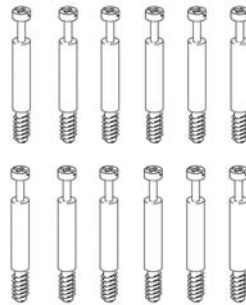


Nylon Double Tack Furniture Glides X 4




Platform Side Panels

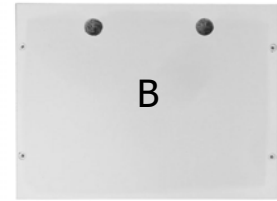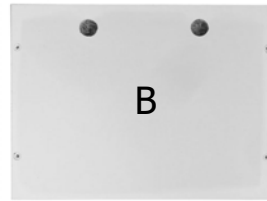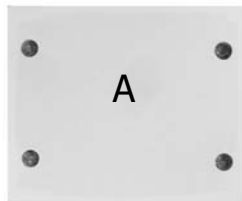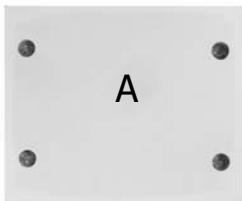

Platform Top

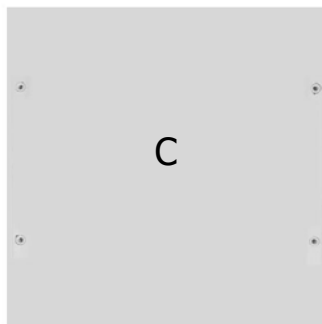


(1) Insert all 12 cam-lock nuts into sockets on platform panels A and B (*see below)

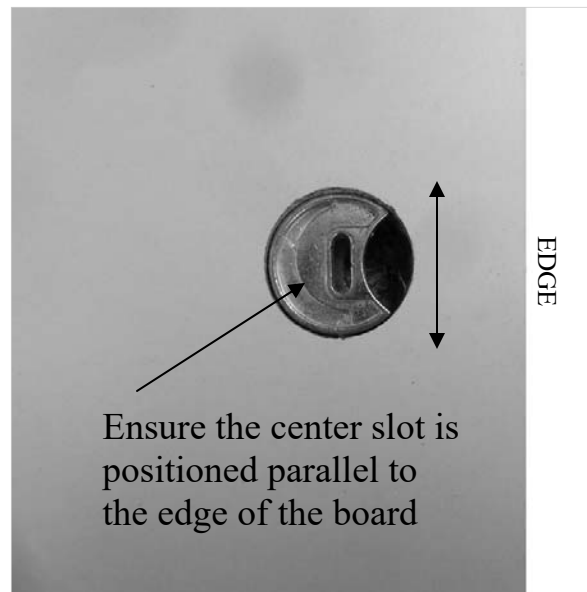


(2) Insert cam-lock screws into sockets on platform panels B (*see below). Four screws per panel. Tighten with Phillips head screwdriver to full extent.



(3) Line-up cam-lock pegs on panels B with edge sockets on panels A. Then tighten cam-nuts with flathead screwdriver (clockwise) until locked into place)

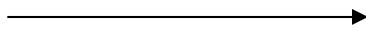



Completed base assembly

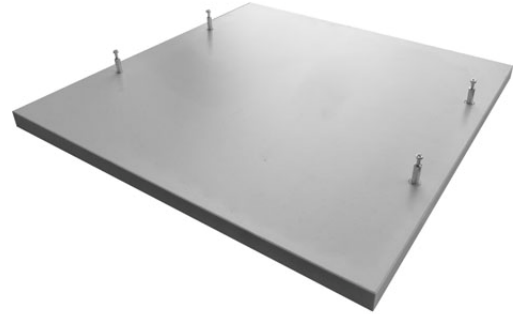

(4) Insert 4 cam-lock screws into sockets on platform top panel C (*see above). Tighten with Phillips head screwdriver to full extent.



(5) Invert base assembly onto platform top panel C. Making sure to line up the cam-lock screw with the holes on the base. Tighten with Phillips head screwdriver to full extent until top panel is secured

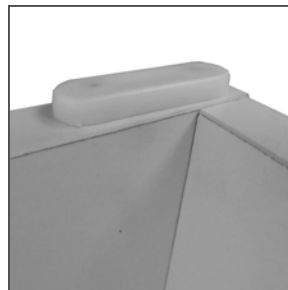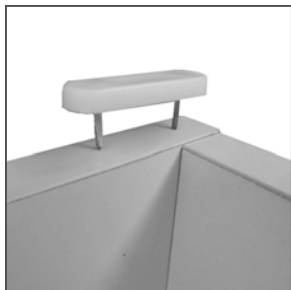

(6) Using a hammer tap the nylon double tack furniture glides into each corner

Finished!

